

# PANASONIC TELEPHONE SYSTEMS

## TIME CHANGE

1. FROM EXTENSION 100 OR ATTENDANT TELEPHONE.
2. WITH THE HANDSET IN THE CRADLE OF THE TELEPHONE, PRESS ON/OFF.
3. PRESS PROG KEY  
(*'PROGRAM MODE' IS DISPLAYED ON LINE 1*)
4. PRESS # TWICE (##)
5. SELECT FF1, WHICH IS 'SYSTEM PROGRAM' DISPLAYED ON LINE 1.
6. SELECT 1, WHICH IS 'SELECT TIME MODE' AND PRESS #.
7. SELECT 2, WHICH IS 'TIME SET MOD' AND PRESS #.
8. ENTER THE TWO DIGIT HOUR AND MINUTE (HHMM) IN 24-HOUR FORMAT AND PRESS #.
9. PRESS ON/OFF TO SAVE AND EXIT PROGRAMMING MODE.